 
 


## 2 In 1 Touch Control Bottle Desk Lamp

 
Model # JG-TDL01-BTL02



### PACKAGE CONTENTS



2\*table lamp



2\* USB cord



2\* remote control


Please remove protection film on top touch pad before 1st use.

### HOW DOES IT WORK

 1


The lamp can be used either cordless (if charged) or with USB cord.

Slide the switch on the lamp base to ON. The lamp default setting is 100% brightness in white light and will be in the rotating/wave mode. To turn on the top light, touch the top of the lamp.

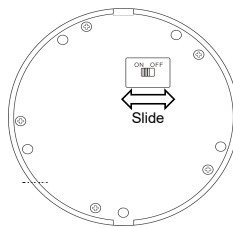


2

 Short press the center part of the top cover, and the top light can cycle from light color options and jump or fading modes with each short press. Long press to turn off or back on. (unit will not turn on if master power switch is in the off position.) The light has a memory function that will return to the same brightness and mode that was last used.

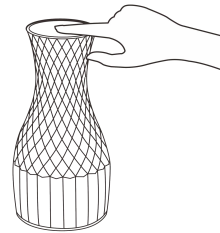


3

 Short press the touch control on bottom light base, and the bottom light switches from light color options and jump or fading modes with each short press. Long press to turn off, then turn it back on. The light has a memory function that will return to the same brightness and mode that was last used.

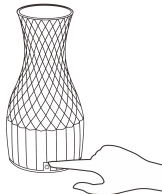

4

 When the light is very dim or off during use, please recharge the lamp by USB cord and power adapter. (Power adapter not provided) We suggest to use a power adapter of 5V 1A or 2A. There is a charge indicator near the USB port, it will turn to red during charging and turn to green when fully charged.

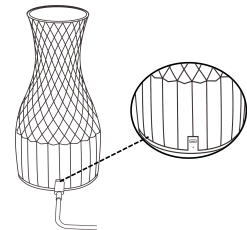

5

ON 1 and OFF 1 to control the on/off of bottom light.

ON 2 and OFF 2 to control the on/off of top light.

 
When the top light is on, the remote can control light colors/working mode/brightness/timer on the top light.

When the bottom light is on, the remote can control light colors/working mode/brightness/timer on the bottom light.

When both the top light and bottom light is on at same time, the remote can control light colors /working mode/brightness/ timer for both lights at same time.

Timer: 1H / 2H/ 4H buttons are for the timer options. After selecting the desired time mode, the lights will automatically turn off once the timer duration has elapsed. Please note, this is a one-time setting with no repeat feature. press timer button, the light will flash 1 time to indicate the timer setting was done successfully. (Note:The 1H/2H /4H timer has a +/- 5% tolerance.)

Turn off the light using the controller, then turn it back on.

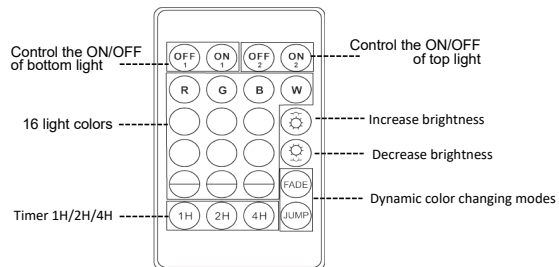

### Specification

Input Voltage : 5V	Product Dimension : 3.7*3.7*7.96inch
Light Color : RGB	Weight : 0.88LBS
Battery : 1200mAh	Material : Plastic
Runtime : approx.4-5 hours (top light only or bottom light only)	Charge Time : approx.2-3 hours

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
1. can not turn on the light	1. battery runs out 2.the switch of the lamp base is not in the ON position	1. charge the lamp 2. slides ON the switch under the bottom base
2.When the top or bottom light is not on	1.The top touch switch or bottom light holder touch switch is not turned on	1.Please press the top touch switch or the bottom light base touch switch briefly

## CARE AND MAINTENANCE

Using a wet or dry soft cloth, clean the fixture, never spray any liquid cleaner or water directly onto the light or LED.

## WARRANTY

The manufacturer warrants this unit against defects in materials and workmanship on functional parts, for a period of 6 months from the original date of purchase. Your sales receipt showing the date of purchase of the product if your proof of purchase. Keep sales receipt in a safe place for future reference. this product is made with the highest quality materials and is warranted to be free from defects in materials and workmanship at the time of purchase. This limited warranty applies to products manufactured or distributed by the manufacturer, are delivered in the continental United States, and extends to the original purchaser, or gift recipient. This warranty becomes valid at the time of purchase and terminates either by the specified time frame listed above and or owner transfer. Any extended warranties (Warranties that cover above and beyond this manufacturer warranty) that are sold through a retailer or third party, are not directly correlated with this product's limited warranty, and may be redirected to said retailer or third party for coverage. This warranty extends through the manufacturer of the product and covers functional parts only. Cosmetics are not covered, unless unequivocally determined it is a workmanship defect. Shipping damage should be addressed with the shipping company, retailer or place of purchase, not the manufacturer unless the manufacturer was the direct shipper. The manufacturer's sole obligation under this warranty shall be limited to furnishing the original purchaser replacement parts for units deemed repairable by the supplier's warranty department. The purchaser is responsible for insurance coverage on any parts shipped or returned if desired. The purchaser is responsible to prepay any shipping charges (both ways) including, but not limited to taxes and duties. All exchanged parts and products replaced under this warranty will become the property of the manufacturer. The manufacturer reserves the right to change manufactures of replacement parts or products for use, in order to cover any existing warranty. The purchaser may be asked to provide the supplier with proof of purchase documents including the date of purchase. Any evidence of alteration, erasing or forgery of proof of purchase documents will be justified cause to void this limited warranty. Products, in which the serial number has been defaced or removed, are not eligible for warranty coverage. This warranty does not apply if the unit has been subject to negligence, fabrication, misuse, abuse or repairs, alteration by non-manufacturer authorized personnel, inappropriate installations or any case beyond the control of the manufacturer. Examples of warranty invalidation may also include, but are not limited to: Use of lacquer or paints in (and around) the unit Electrical requirement deficiencies (see manual for specific electrical requirements) Use with extension cords/timers/surge protectors/GFCI Outdoor Applications Normal wear /tear/weathering, Pet / Consumer accidents. The manufacturer shall not be liable for any loss due to use (or misuse) of the unit or other incidental or consequential costs, expenses or damage without irrefutable foundations. Under no circumstances shall the manufacturer or any of its representatives be held liable for injury to any person or damage to any property, however arising. Any implied warranty shall have duration equal of the applicable warranty stated above. Specifications are subject to change without notice or obligation. This limited warranty gives the original purchaser specific legal rights. Other rights may vary from state to state. In order to utilize the warranty, you must register your purchase within 30 days from the date of purchase.

You may be asked to return the damaged/defective product for inspection prior to warranty repair or replacement.

**This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:**

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## SAFETY INFORMATION

 
- \* Please do not disassemble or modify the led light for any-purpose.
- \* Discontinue use if damaged.
- \* This equipment belongs to portable luminaries with batteries. The battery in this device is not user serviceable.
- \* Do not try to replace it on your own.
- \* The battery disposal should be in compliance with any local regulations that address the disposal of hazardous materials.
- \* Do not burn any of the items.




# WARNING

5mm

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 Hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

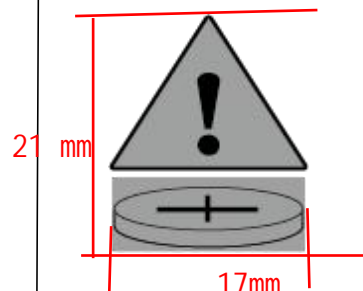

## CAUTION

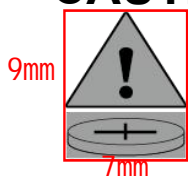 

This symbol marked on the product indicates "Warning: contains coin battery".

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60° or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

- The compatible battery type is CR2025. The nominal battery voltage is 3V.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.