

正面


### Motion sensor night light User manual

**Product introduction:**  
Thank you for purchasing this product. This human body induction night light has two types : fixed and 360 ° rotation.

**Each type has two options: battery and charging.**  
The battery model is powered by 3 AAA batteries (not include) .  
The charging model is powered by a built-in battery and can also be installed with 3 AAA battery Universal charging cable can be directly connected to the product for charging, the indicator light is red when charging, and automatically turns green when fully charged.  
Please refer to the following installation and use according to different product styles.

**Specifications:**  
Light source: 6 high-quality LED lamp beads (5 battery models)  
Light color: warm white / warm yellow  
Optional power supply mode: battery (not include) / charging (built-in) Optional use form: fixed / 360 ° Rotary optional induction distance: ≤ 5 meters (depending on the working environment)  
Voltage: DC4.5V / 5V Power: 0.7W


#### Fixed type

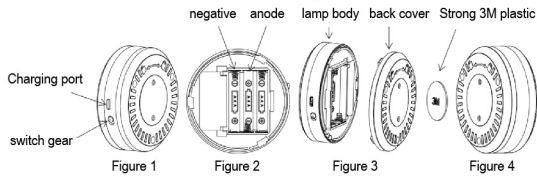

80.00 mm

背面

### 360 ° rotating sensor light

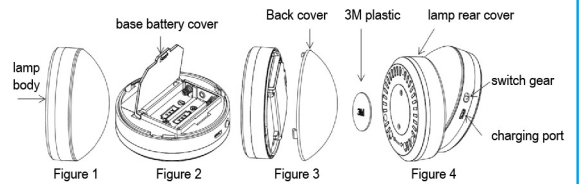

- Installation :**
- Charging section -- direct connection charging**  
The charging position is "AUTO" for automatic sensing mode, and the night light will automatically turn off 20 seconds after the sensor lights up; "ON" is the constant light mode; "OFF" is the off mode. When the night light is turned off, it will not perform the sensing work.
  - Battery models --** Rotate the rear cover / light body cover counterclockwise, install the battery in the positive and negative directions indicated by the battery slot, align the bayonet on the light body with the buckle on the back cover, clockwise Just rotate the back cover.
  - One side of the strong 3M glue is glued on the back cover, and the other side is glued on the place where the induction lamp needs to be installed.
  - Fixed charging models and 360 ° rotating charging models can also be powered by batteries to prevent the loss or damage of the charging cable from affecting the use of the lamp.

**Note:** 360 ° rotating human body induction lamp. When installing the battery, unscrew the back cover of the lamp body. The base cannot be unscrewed. When the charging sensor light switch is set to AUTO (automatic sensing mode), people need to pass through the sensing area and sense the human body in a dark environment without light. The light will not light during the day, and the battery model does not have a third gear switch. Default human induction mode, in dark environment, people pass the induction zone lights up.  
Please contact your dealer for other outstanding matters.

80.00 mm